 
 
 





Basic display / factory setting



AL1 = Begrenzungswert / Limiter alarm



 AL2 = Voralarm / Pre-alarm



dEF = Istwert Fühler / Actual value sensor



Basic display / customer setting



25 = Istwert Fühler / Actual value sensor